

 
Firmware Upgrade Procedure

Time Lapse Camera TLC2000

version EN A2


Prepare items

1. TLC2000
2. 2 AA batteries
3. microSD card (included in the box)*
4. UBS-C cable
5. DC Adapter

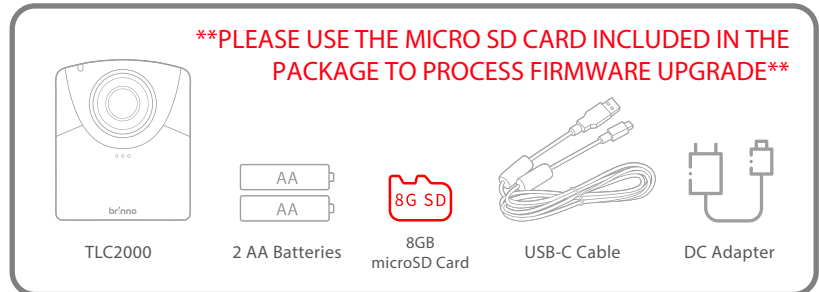


Format microSD card

1. Install new batteries and microSD card into the camera.
2. Format the microSD card in the camera (go to Menu setting > More > Format).

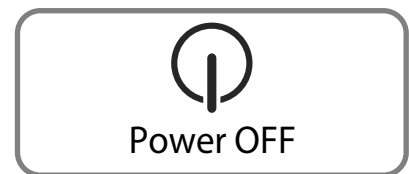


Copy FW file to microSD card

3. Power off camera.
4. Take out the microSD card, insert to computer then copy the firmware file (TLC2K_C.RCF) into the microSD card (F:\DCIM\100TLC2K).

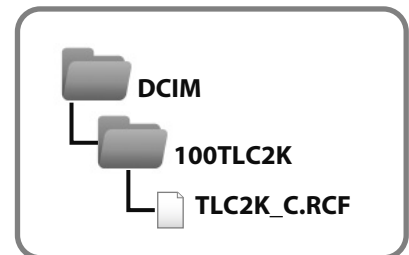

Start FW upgrade

5. Insert the microSD card into the camera.
6. Connect the camera to an external power through USB-C cable.
7. Camera starts to upgrade firmware.
8. LED indicator flashing orange color.
9. When the update process is completed, the camera restarts and the LCD screen turns on.

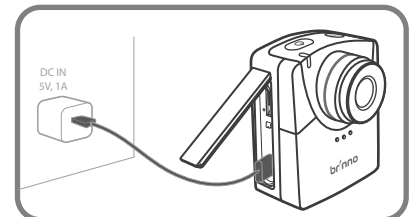

Please do not TURN OFF power or REMOVE SD card when camera is updating firmware!

Note :

1. The firmware update will vary, however the time should not exceed 10 minutes.
2. If the Orange LED is flashing for more than 10 minutes, this means the firmware update failed. Please disconnect the external power and remove the batteries from the camera. Format the microSD card on PC. Then copy the firmware file (TLC2K_C.RCF) into the microSD card (F:\DCIM\100TLC2K) . Please follow the instructions to update the firmware.